

Honda Pioneer 1000

Dual Battery Wiring Diagram

Includes Battery Isolator, Dual Volt Meter & Relay, Stinger Relay, and Fuse Box

This version has BOTH key-on power AND a bypass to allow always-on power



