



INSTALLATION INSTRUCTIONS

Accessory

CARGO BOX
P/N 0SL52-HL5-200

Application

SXS500M2

Publication No.


MII 14948

Issue Date

November 2014

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

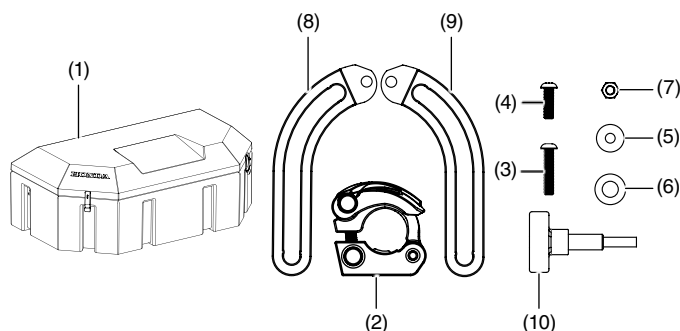

Components are not to scale.

No.	Description	Qty
(1)	Cargo box	1
(2)	Clamp	6
(3)	6 x 30 mm screw	2
(4)	6 x 18 mm screw	12
(5)	6 mm washer	12
(6)	10 mm washer	2
(7)	6 mm lock nut	2
(8)	Hinge arm, right	1
(9)	Hinge arm, left	1
(10)	Knob	2

TOOLS AND SUPPLIES REQUIRED

Torque wrench

Hex socket (4 mm)

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 x 18 mm screw	4.5	0.46	3.3
6 x 30 mm screw	1	0.1	0.9


USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.
- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, and then wash with warm, soapy water and a clean cloth or sponge. Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum solvents such as gasoline, thinner, or benzene to clean this accessory. Also do not use acid or alkaline cleaners.
- Never use the cargo box to transport petroleum, gasoline, thinner, benzene, or any other flammable materials.

INSTALLATION

NOTE:


- Remove and discard the rubber shipping band from the clamps before installation of this accessory.

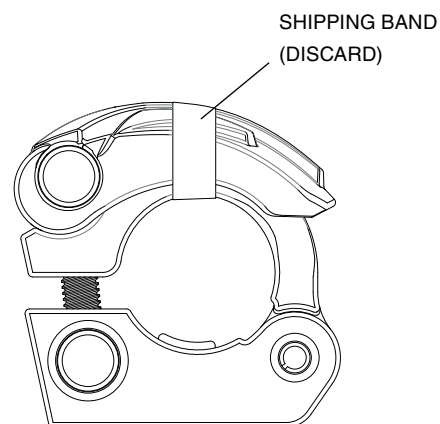

1. Align the left hinge arm to the left bracket on the underside of the cargo box lid so that the holes in both components line up.

Insert a 6 x 30 mm screw through the hole in the hinge arm and pass it through the hole in the mounting bracket.

Install a 6 mm lock nut to the end of the screw and hand tighten. The hinge arm must rotate freely on the bracket.

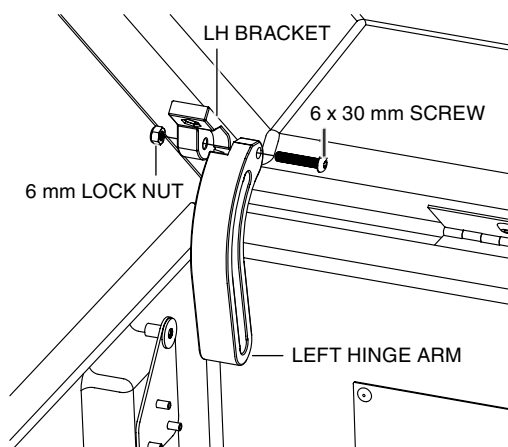


2. Repeat the same process for the hinge arm and bracket on the right side of the cargo box.

3. Align the end of the left hinge arm to the left bracket on the inside of the cargo box so that the holes in both components line up.

Place a 10 mm washer on the end of the knob and pass it through the hinge arm.


Thread the knob into the top hole of the left bracket.

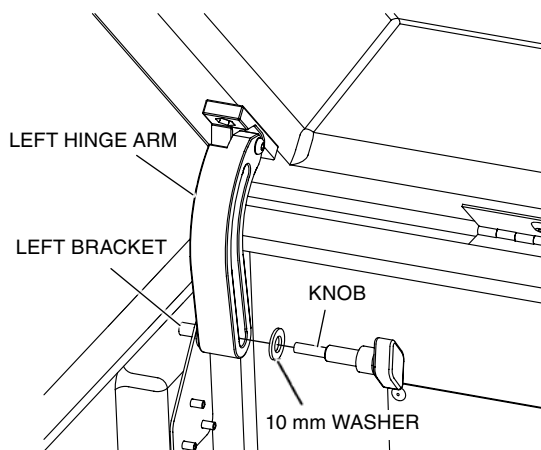


4. Repeat the same process for the hinge arm and bracket on the right side of the cargo box.

5. Orient the cargo box so that the lid is open and the underside is accessible.

Loosely install the clamps using the 6 mm washers and 6 x 18 mm screws as shown.

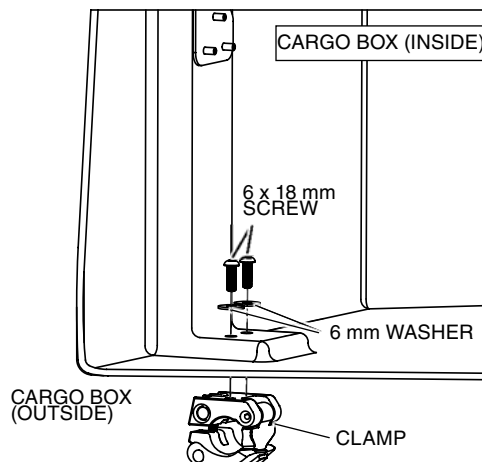


- Orient and loosely install the remaining clamps at the positions shown:

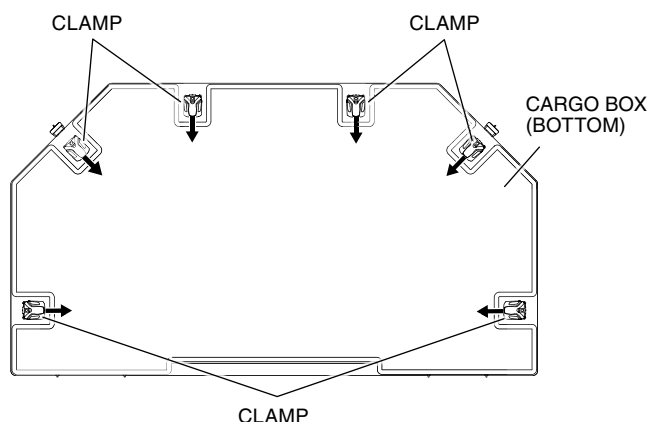


6. Open all six clamps on the underside of the cargo box.

7. Center the cargo box on the top of the rear rack as shown.

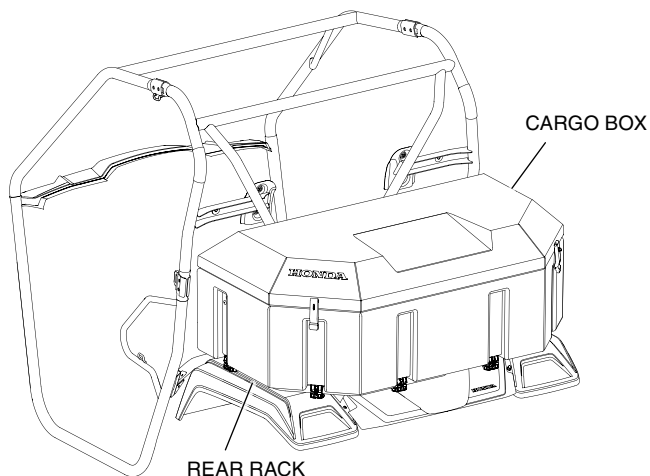


- The back edge of the cargo box should be parallel with the rack cross bar as shown.

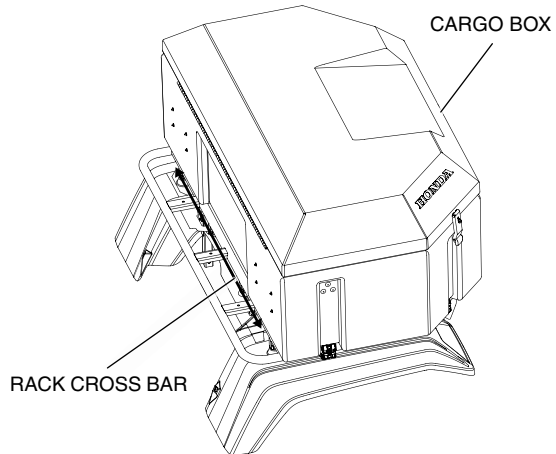


8. Align the clamps around the rack frame bars.

Adjust clamp tension by rotating the threaded arm clockwise to tighten, counter-clockwise to loosen.

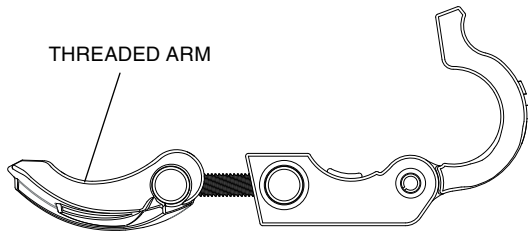

9. Swing the threaded arm over the top half of the clamp and snap the arm closed.

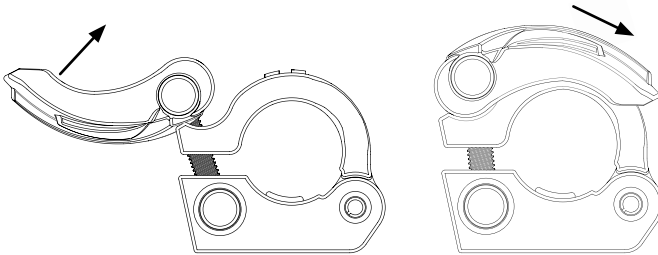

10. Tighten the screws for all six clamps to the value specified in the Torque Chart.