

SEAT UNDER HEAT PROTECTOR

REMOVAL/INSTALLATION


Remove the following:

- seat bottom covers (page 2-7)
- two bolts [1] and ignition coil [2]
- six clips [3]

Release the following items from the seat under heat protector [4] and remove it.

- fuel feed hose [5]
- throttle cable clip [6]
- O₂ sensor wire clip [7]
- six main wire harness clips [8]

Installation is in the reverse order of removal.

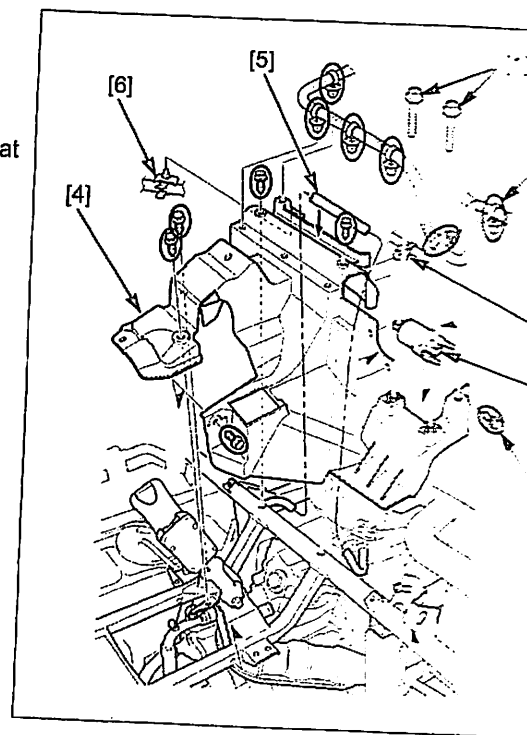

REAR SIDE COVER

REMOVAL/INSTALLATION

RIGHT SIDE:

Remove the following:

- right mud protector cover (page 2-6)
- right door (page 2-11)
- nine clips [1]

Temporarily remove the fuel filler cap [2].

Remove the rear side cover [3].

Install the fuel filler cap.

Installation is in the reverse order of removal.

LEFT SIDE:

Remove the following:

- left door (page 2-11)
- eight clips [1]
- rear side cover [3]

Installation is in the reverse order of removal.

Right side shown:

