

Honda Pioneer 1000

Dual Battery Wiring Diagram

Includes Battery Isolator, Dual Volt Meter & Relay, Stinger Relay, and Fuse Box
Added Winch, dome lights with dimmer, and backup lights



