

# Honda Pioneer 1000

## Dual Battery Wiring Diagram

Includes Battery Isolator, Dual Volt Meter & Relay, Stinger Relay, and Fuse Box



