

Dual Battery Wiring Diagram for  
2023 Honda Pioneer 1000-5

Club Store Power ACC  
Pin for Key-On Power

Connect to ACC plug  
wrapped in blue tape in  
upper right section under  
hood

Stinger  
Relay

Positive Busbar

Factory  
Positive  
Feed

Auxiliary Battery

Main Battery

To Built in Ground

To Stinger  
Relay

Negative Busbar

Fuse Box  
With  
Positive  
and  
Negative  
Terminals

Isolator  
(Tru Isolator Kit  
From Club Store)

Blue Wire from Tru Iso-  
lator kit

Volt Relay  
(Part of Isolator kit)

Spare Ground- Not Used

Accessories

To Fusebox

Interior/Cab Light  
Connect to  
Fuse Box

Rear 20" Light Bar

Winch Solenoid/  
Contactor Relay

Connect Directly to  
Auxiliary Battery

To  
Winch

To Fusebox

Relay

Rocker  
Switch

