




HONDA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publication No.
UNDER DASH STORAGE P/N: 08L71-HL4 -F00	SXS1000M3/M3P/M5P/M5D	MII 15753
		Issue Date November 2016

PARTS LIST

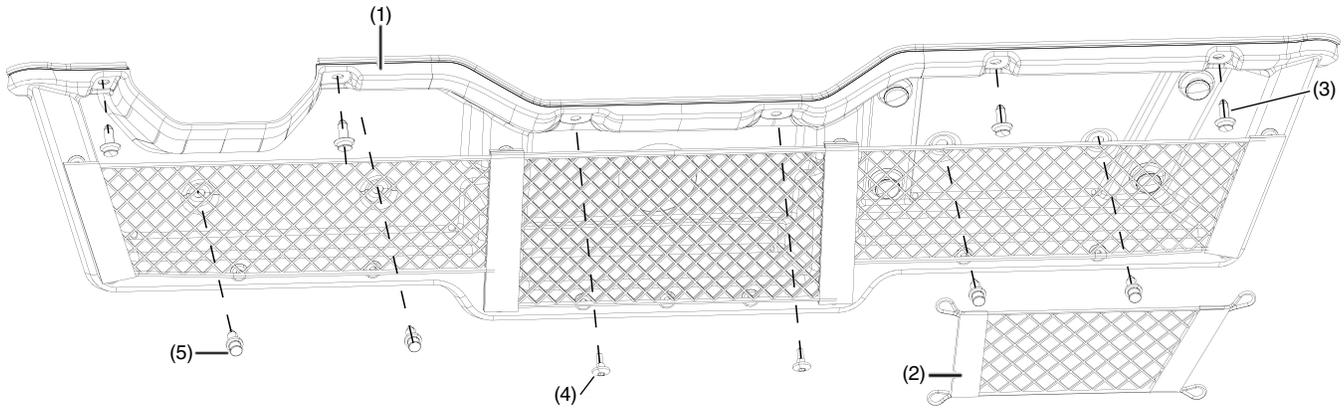

No.	Description	Qty
(1)	Under Dash Storage Unit	1
(2)	Net, Passenger Side Storage	1
(3)	Long Trim Clip	4
(4)	Pan Screw, 5 x 16 mm	2
(5)	Short Trim Clip	4

TOOLS AND SUPPLIES REQUIRED

Hex Wrench (4 mm)
 Power Drill
 Drill bit (3/8 inch)
 Marker
 Torque Wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts


Item	N·m	kgf·m	lbf·ft
5 mm Screw	4	0.4	3

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary
- Replace this accessory with a new one if it is damaged or discolored excessively.
- To clean the under dash storage, empty the storage area, clean the interior with warm water and soap using a wet cloth or sponge, and rinse it thoroughly. Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum based solvents such as gasoline, thinner or benzene to clean this accessory. Also do not use acid or alkaline cleaners.



INSTALLATION

1. Remove and save the four trim clips and two pan screws from the lower area of the instrument panel as shown.

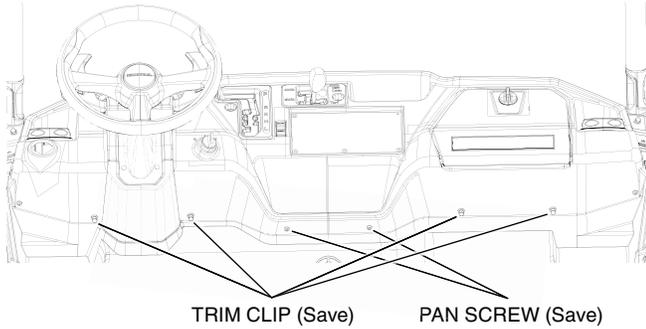


After '16 Model Year

2. Using the 3/8 inch drill bit, drill a hole in the front floor cover at each molded drill point as indicated below. After the holes are drilled, proceed to Step 7.

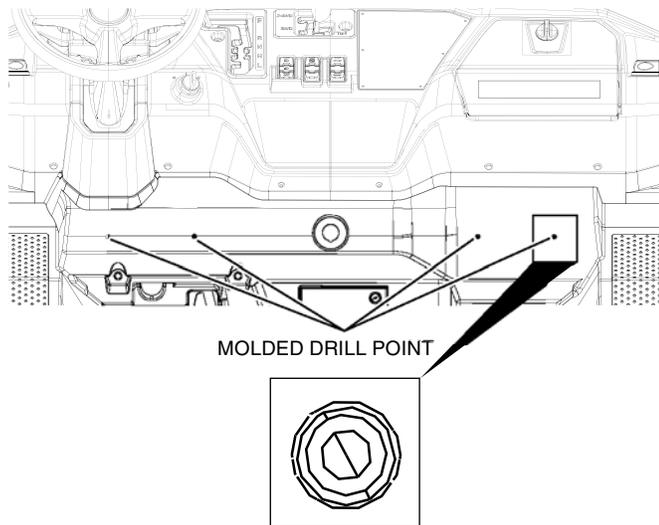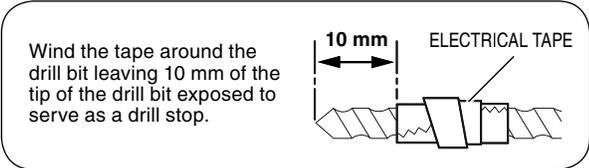


'16 Model Year


3. Temporarily install the under dash storage assembly on to the front floor cover and secure the center and upper corners as shown using:
 - a. (2) Pan screw, 5 x 16 mm
 - b. (2) Long Trim clip
 Do not set the long trim clip at this time.

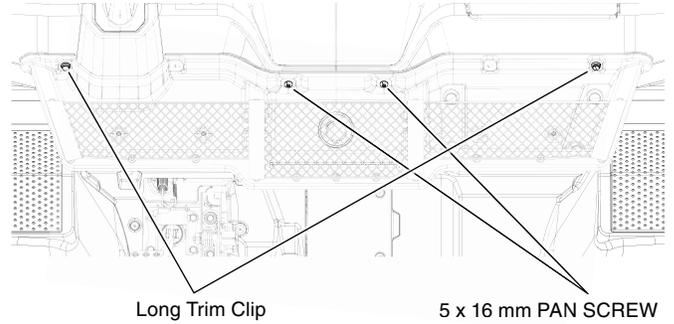

4. Apply upward pressure to hold storage assembly firmly against the front floor cover. Use the holes shown as a template to mark the position of four holes to be drilled in the floor cover.

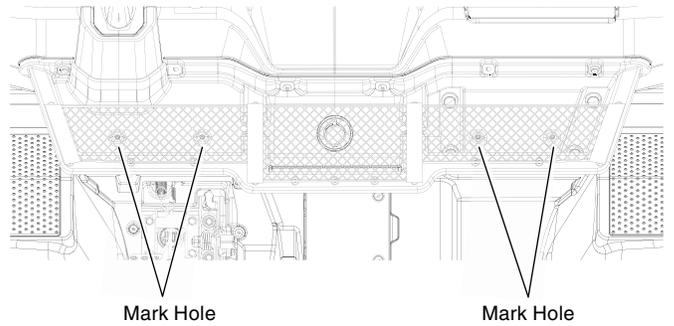


5. Remove the under dash storage assembly.
6. Using the 3/8 inch drill bit, drill holes in the floor cover at the positions marked in Step 4.

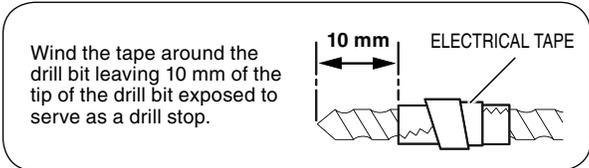

ALL YEARS


- 7. Hold the under dash storage assembly against the instrument panel.

Install, but do not tighten, the the 5 x 16 mm pan screws through the under dash storage as shown.

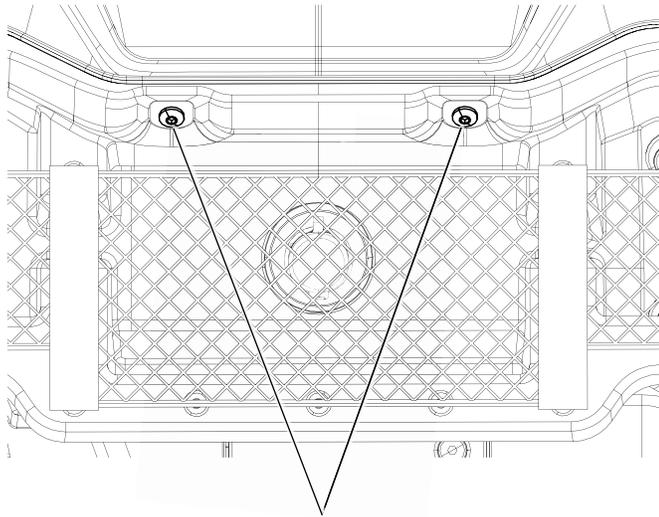


5 x 16 mm PAN SCREW

- 8. Install a long trim clip at each of the four locations as shown.

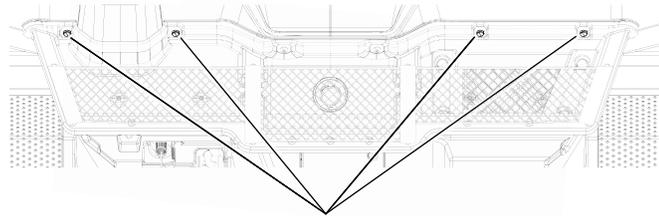


Long Trim Clip

- 9. Install a short trim clip in each of the four holes drilled in Step 6 as shown.

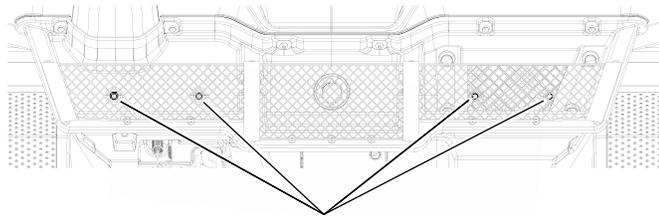

Short Trim Clip

- 10. Install the passenger side storage net with the trim clips as shown.

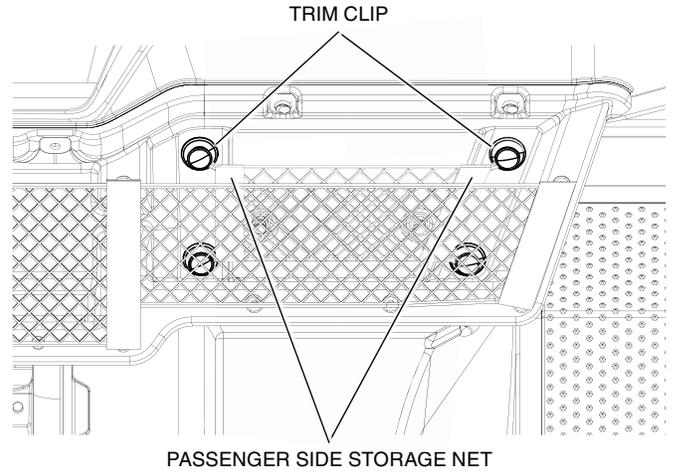

TRIM CLIP

PASSENGER SIDE STORAGE NET

- 11. Tighten the hardware to the specification in the Torque Chart.