



INSTALLATION INSTRUCTIONS

Accessory

BIMINI TOP (5P)
P/N 0SR85-HL4-322A

Application

SXS1000M5P/M5D

Publication No.


MII 15262

Issue Date

October 2015

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

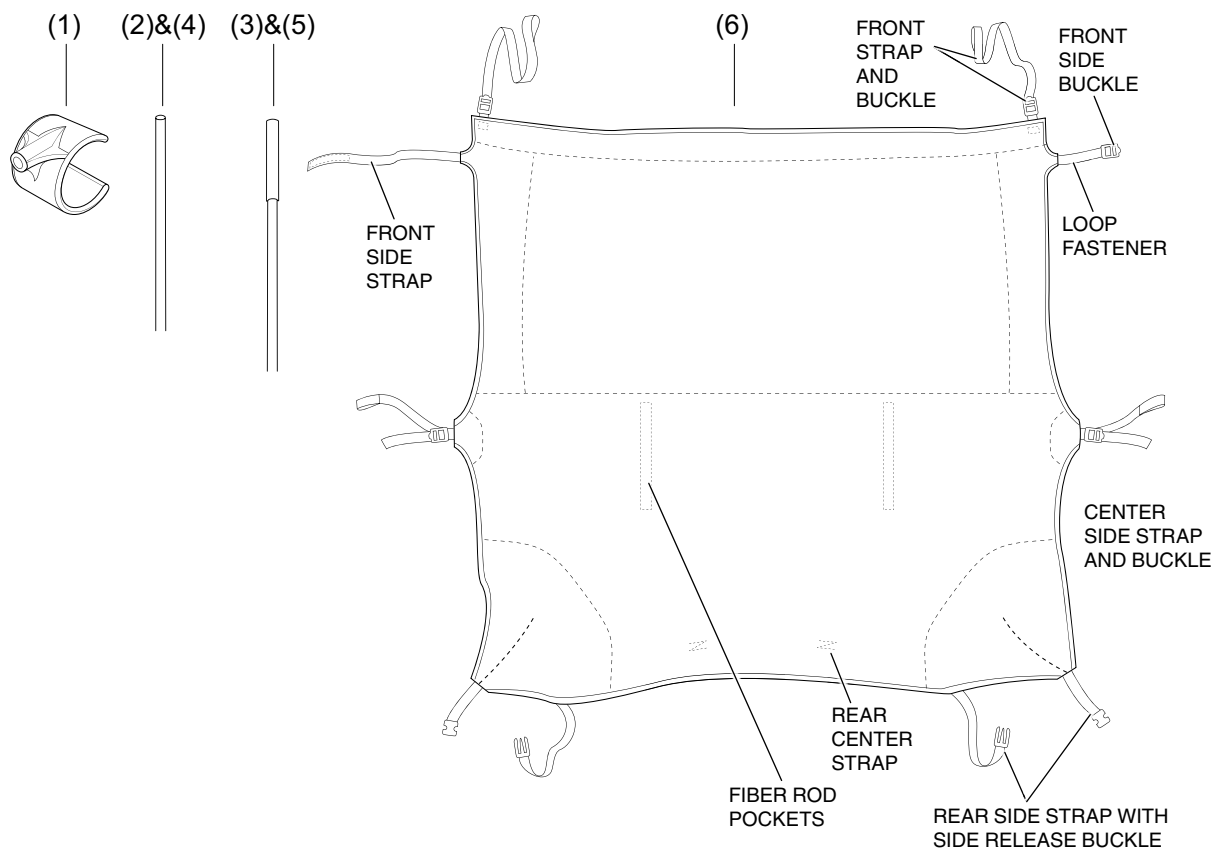

No.	Description	Qty
(1)	Bar snap	8
(2)	Fiber rod - long with ferrule	2
(3)	Fiber rod - long	2
(4)	Fiber rod - short with ferrule	2
(5)	Fiber rod - short	2
(6)	Bimini top	1
(7)	Installation Instruction URL (not shown)	1

TOOLS AND SUPPLIES REQUIRED

Gloves


Safety goggles

USE AND CARE INFORMATION

- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.

INSTALLATION

1. Lay the bimini top over the cab frame. The rear side straps with side release buckles should hang to the back.

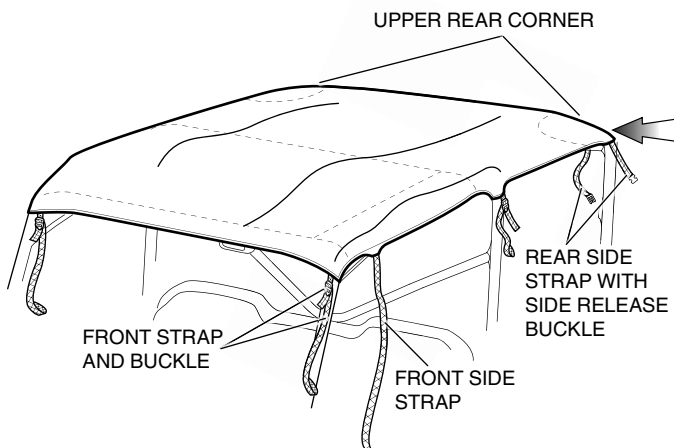

⚠ CAUTION

To prevent injuries, wear eye protection and gloves when handling the fiber rods.

2. Install the fiber rods:

Connect the short fiber rods together.


Connect the long fiber rods together.

Insert the assembled rods into the pockets on the bottom of the bimini as shown.


- The short rods must be inserted into the loops hanging off of the pockets.

Install a bar snap (not shown) onto the end of each fiber rod.

Install the bar snaps to the cab frame.

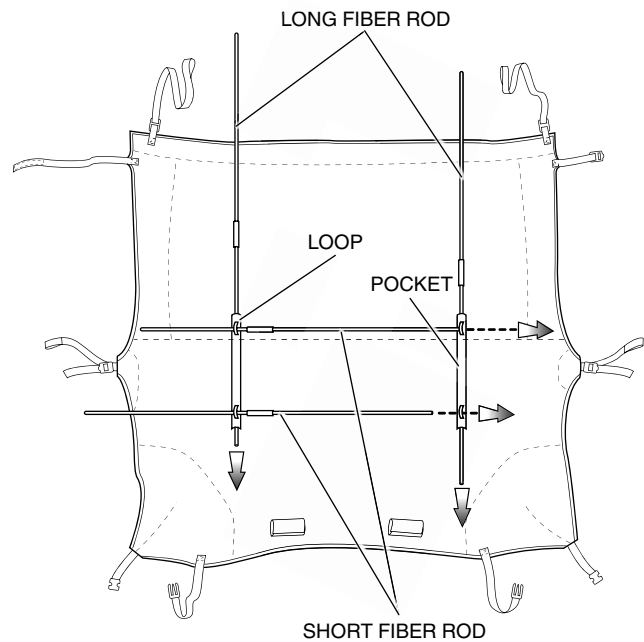


3. Remove the center side strap from the buckle. Thread the strap around the cab frame B-pillar, below the headrest support bar, and back through the loop in the end of the strap as shown. Thread the end of the strap back through the buckle.
 - Do not tighten at this time.Repeat for the other side.

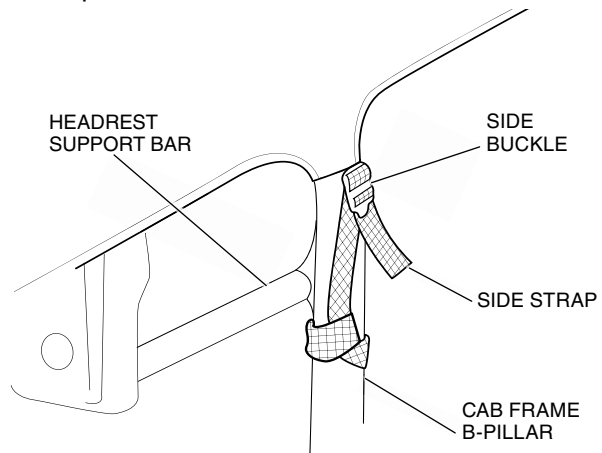

4. Wrap the rear side strap with side release buckle down behind the cab frame C-pillar, around the net bracket, and back up to the mating buckle as shown.

- Do not tighten at this time.

Repeat for the other side.

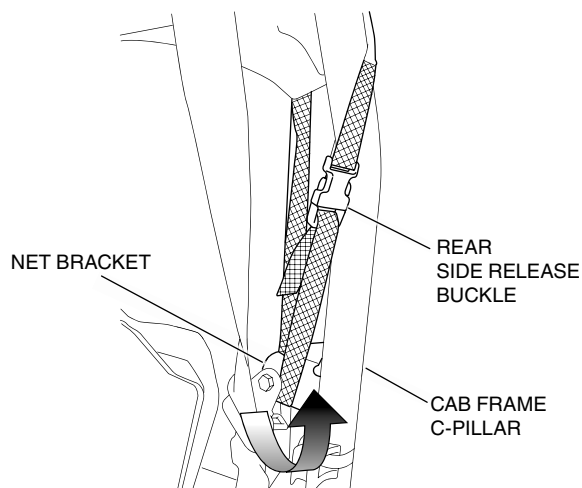


5. Remove the front strap from the buckle. Thread the strap around the cab frame A-pillar, below the bolted joint, and back through the loop in the end of the strap as shown.

Thread the end of the strap back through the buckle.

- Do not tighten at this time.

Repeat for the other side.

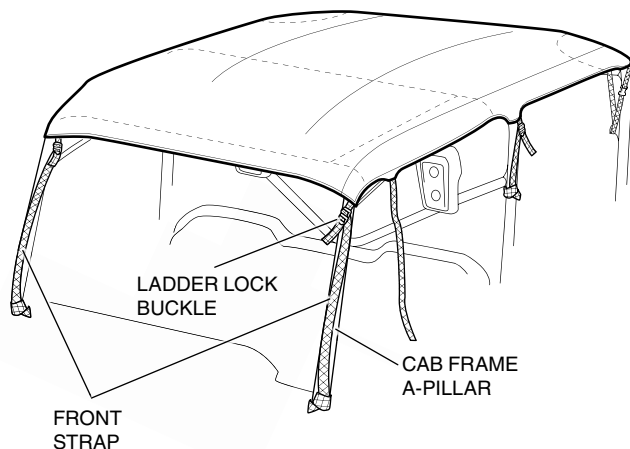


6. Wrap the rear center strap around the upper rear horizontal cab frame bar.

Thread the strap through the buckle and back to itself as shown.

Repeat for the other side.

Tighten all the straps at this time (front, side, rear).

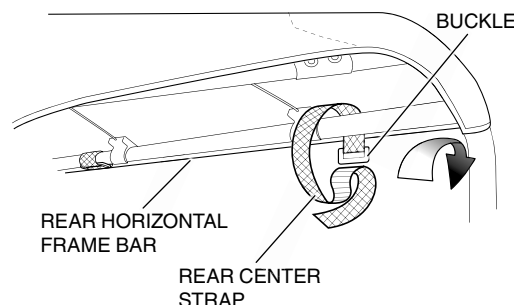

7. Install the front side strap as shown.

- The strap must run on top of the plastic bar snaps, not on the fiber rods.

Thread the strap through the mating front side buckle and tighten.

Secure the end of the strap by doubling it back through the end of the buckle and attaching the hook and loop fasteners.

