



INSTALLATION INSTRUCTIONS

Accessory

FABRIC MID-PANEL (5P)
P/N 0SR95-HL4-211A

Application

SXS1000M5D/M5P

Publication No.


MII 15262

Issue Date

August 2015

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

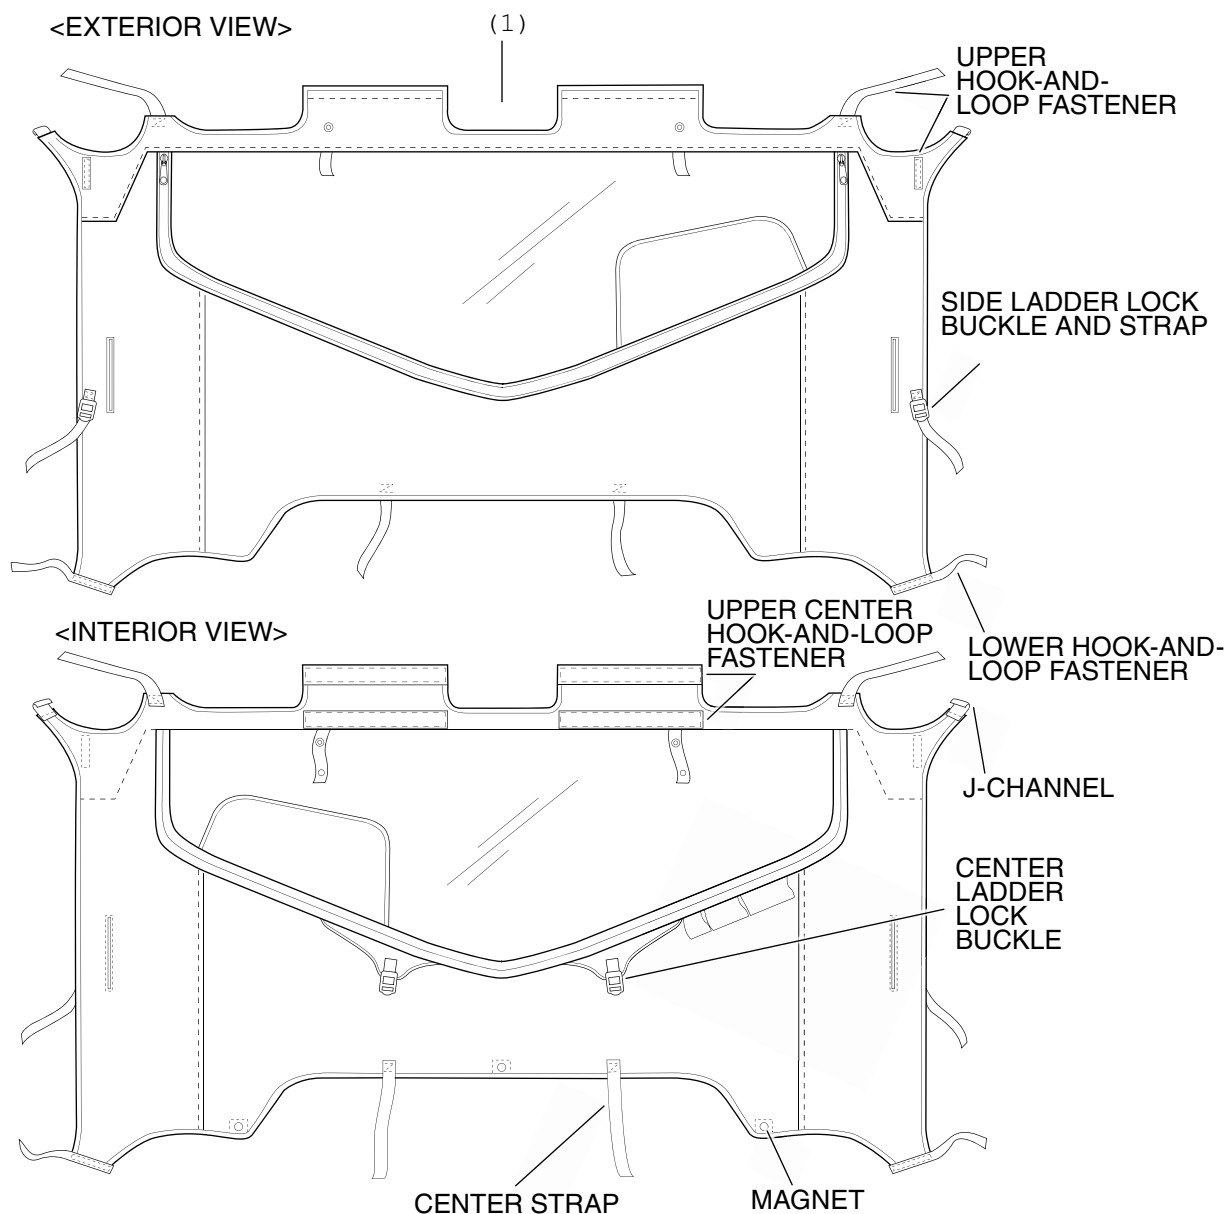


No.	Description	Qty
(1)	Fabric mid-panel	1

USE AND CARE INFORMATION

- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.
- The rear window can be rolled up and stowed using the webbing strap and snaps.
- When not in use, the window roll up straps can be fastened to themselves using the snaps.
- Do not force the zipper on the rear window. In case of a jam, unzip and remove any obstructions. If problems persist, the zipper must be cleaned.
- The zipper should be cleaned using a toothbrush with soap and water and rinsed as needed to keep it free of dust and dirt. Once the zipper is cleaned, the teeth should be lubricated using beeswax.


INSTALLATION

1. Hook the upper J-channels to the side edges of the of the center cab frame cross bar braces as shown.

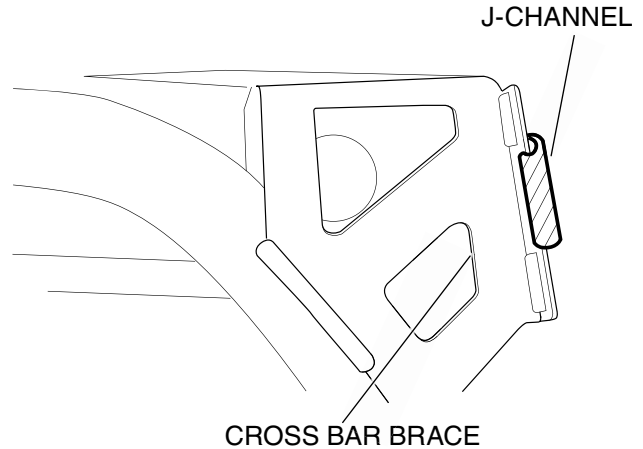


2. Drape the mid-panel over the center cab frame cross bar and then affix the hook-and-loop fasteners tightly around the cross bar as shown. Pull the rear side-net release buckles through the slots in the mid-curtain.

HOOK-AND-LOOP FASTENER

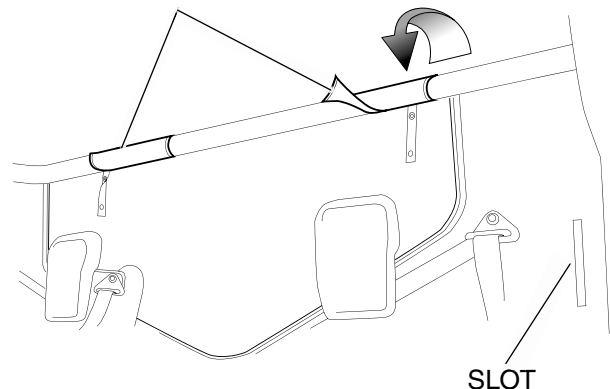


3. Attach the upper hook-and-loop fasteners around the upper frame tubes and then back to the mating hook-and-loop fastener at the upper outside edge of the mid-panel as shown.

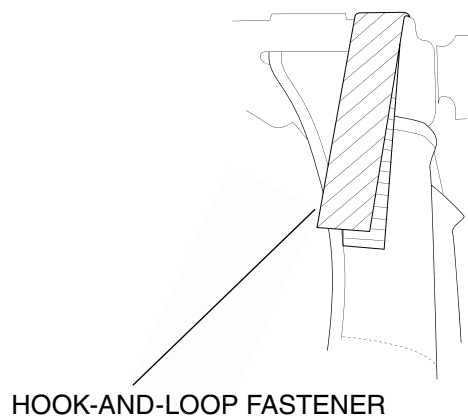


4. Thread the lower rear strap behind and around the door latch support and then back through each ladder lock buckle. Make sure that the release buckle for the rear side-net sticks through the slots at either side of the mid-panel. Tighten the strap on both sides.


DOOR LATCH
SUPPORT

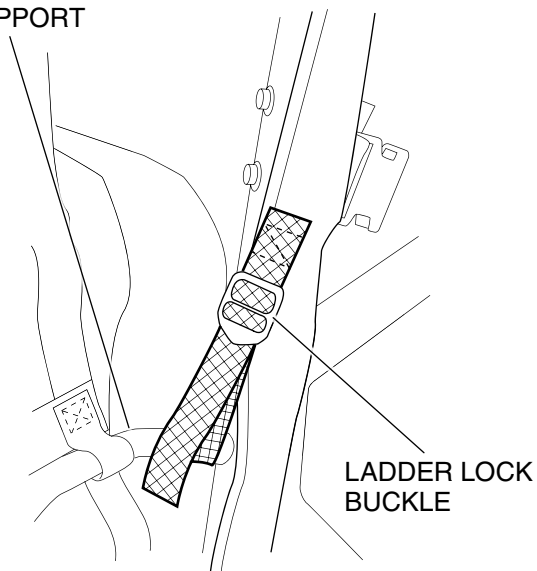

5. Wrap the hook-and-loop at both lower rear corners around the cab frame upright.

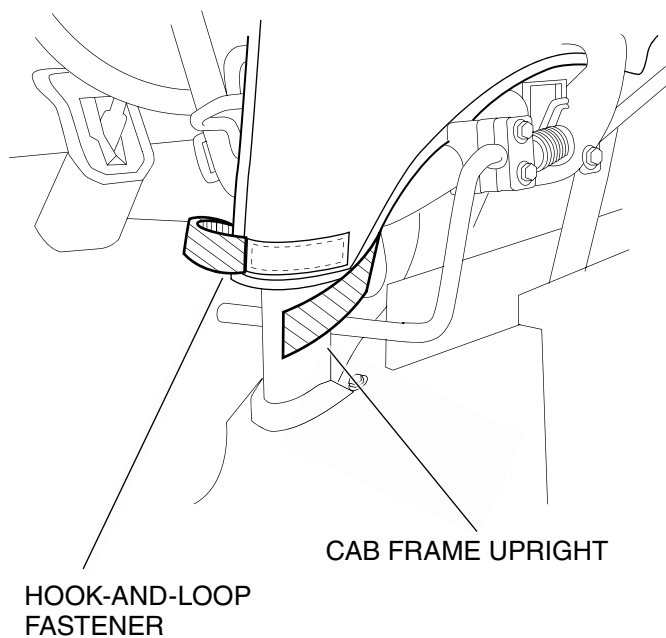

6. Thread the lower rear center strap down and around the upper seat support, between the support and the seat, then back through the ladder lock buckle as shown. Tighten the strap.

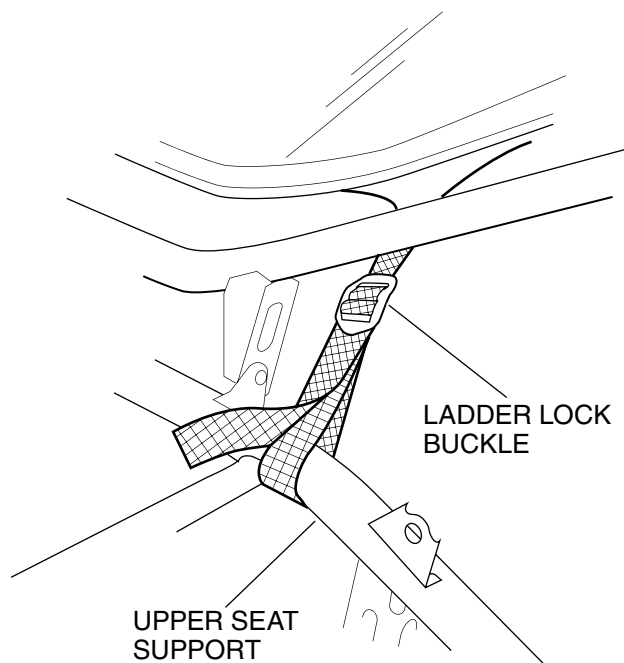

7. Ensure that all three rear magnets are stuck to the upper seat support.

