



951 E Grand Ave
Arroyo Grande, CA 93420
888-541-7223

Honda Talon Mount Instructions



Product Overview

This mount is for the Honda talon and will be mounting in place of the glove box in the center console.

Read this guide entirely before beginning installation!

Contents:

- Mounting plate x 1
- Black sheet metal screws x 7
- Gauge cluster support bracket x 1

Install your radio and intercom

Install the intercom and radio using the L-Brackets and allen head bolts provided (on some mounts these brackets are already on the mount). If installing RDM-DB radio use the L-Brackets provided with the radio and not the ones with the mount for mounting the radio, intercom brackets with mount will still work for intercom. Refer to "General Intercom & Radio Mount Assembly".

Removing the Glove Box

Using a cutting tool of your choice such as a dremel or hot knife, cut just on the inner side edge of the glove box all the way around. We will remove the box completely.


After cutting the front of the box should move freely. To finish removal of the box you must pop open and remove the hood in the front of the vehicle to gain access to the back side of the dash and glove box. There you will see a bolt attaching the back of the gauge cluster to the glove box, remove this bolt and pull out the box out of the vehicle. You will not need the box or bolt anymore.



Modify the gauge cluster

Before you can install your mount you need to modify the gauge cluster support to create clearance for the radio to fit.

Where the bolt went through that was attached to the glove box there is a bend just above it on the gauge cluster support this is where you will cut. It should look like the picture to the right after the cut with the mount inserted.

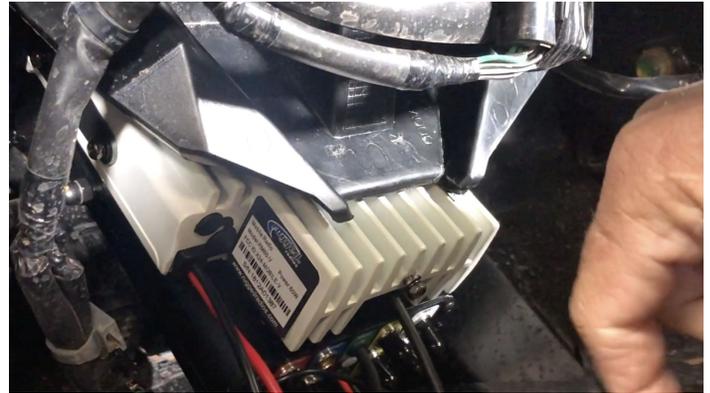

Run your cabling

Run power cables to the battery terminals. Refer to Tech **Bulletin: WTB.1.1 page 7**

Run all headset, PTT, and coax cabling and be sure to run them separately. Refer to Tech **Bulletin: CBL.1.0 page 9**

Be sure to leave enough slack in cables behind the radio and intercom for servicing. Refer to Tech **Bulletin: SVC.1.0 page 16**

[Tech Bulletin pages are found in our Installation Guide](#)

[General Installation Guide](#) [ADD QR CODE HERE](#)

At this point your mount should have the radio and intercom completely installed and have the headset cables, coax cable (Antenna cable), power cable and PTT buttons connected securely and you may now finalize your mounting by firmly securing the mount back in place. Do a complete systems check to make sure everything is operating properly and enjoy. Please contact us for any questions.

888-541-7223



3

Once the Can am X3 Top mount is installed, it should look like this:




RUGGED RADIO & INTERCOM MOUNTS

What's included?


! A 4mm Allen Wrench is required for mount installation

This guide applies to the following mounts: • MT-XP1-RM60 • MT-X3-TM-RM60 • MT-KRX-CM-RM60

Rugged Radio & Intercom Mount
(Appearance May Vary)

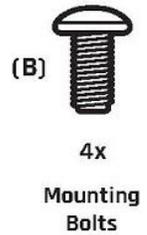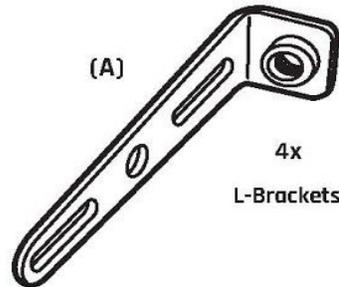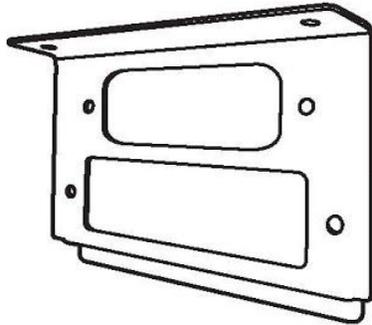


Install L-Brackets using included mounting bolts

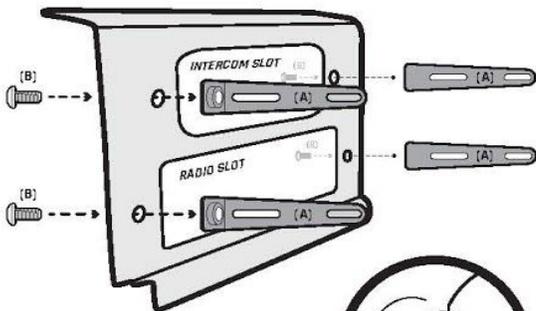

When installing, rotate L-Brackets so that the arm is facing inwards, towards the intercom/radio slots


! REQUIRED INSTALL HARDWARE	(C)  2x M6 1.0 Acorn Nut	(D)  2x M6 1.0 Hex Bolt (12mm)	(E)  2x Lock Washer	(F)  4x M4 0.7 Radio Mounting Bolt
	PACKAGED WITH RUGGED INTERCOM		PACKAGED WITH MOBILE RADIO	

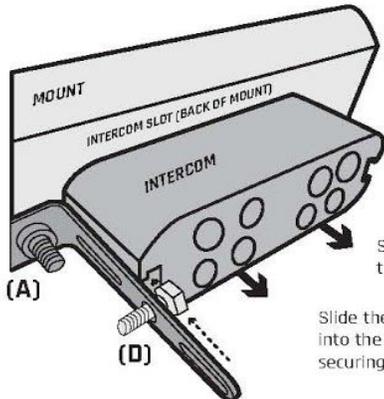

Slide your intercom through the front of the intercom mount.

Slide hex bolts (D), facing inward, into the holes in the L-Brackets (A) on either side.

Slide the heads of the hex bolts (D) flush into the slots in either side of the intercom, securing the intercom in place.

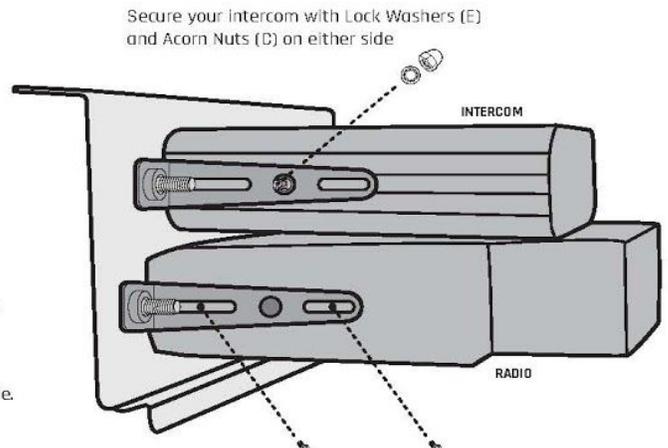

Secure your intercom with Lock Washers (E) and Acorn Nuts (C) on either side

Secure your radio with Radio Mounting Bolts (F) on either side